


TOMAHAWK AIR-K

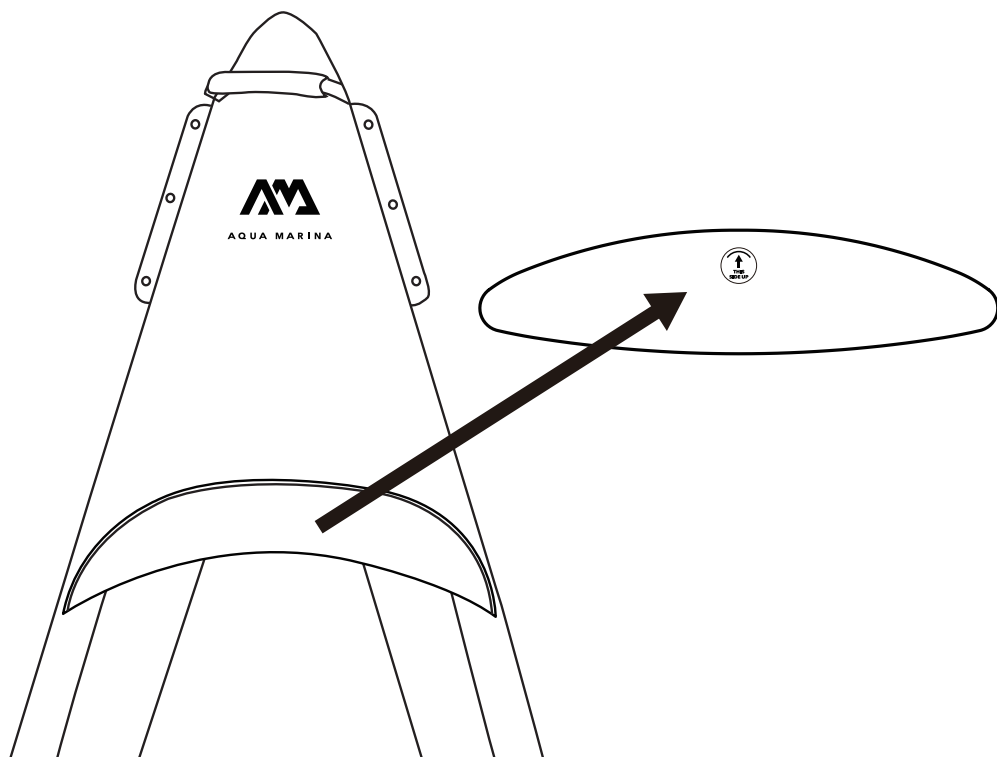

IMPORTANT!

**REMOVE THE PLASTIC INSERT
BEFORE FOLDING THE KAYAK.**